

Plat'Home





Important Safeguards

To ensure for safe operation of the equipment comprising this device, carefully read through and observe the following safety instructions.










- Operate this device according to the instructions and procedures contained in this document.
- Follow all safety precautions appearing in this document.

Neglecting to follow the safety precautions may cause a fire, or damage the equipment.

Safety Related Graphic Symbols

 Warning	Mishandling of instructions indicated by this symbol may lead to death or serious injury.
 Caution	Mishandling of instructions indicated by this symbol may result in damage to the building, facilities, and the like
	Indicates that operation must be performed in accordance with the instructions. Used only when specific procedures are required.
	Indicates prohibited usages and the like. Used only when special attention some aspect of operation or the like is required.











Prohibited Usages

 Warning		Do not introduce foreign items such as clips and the like into the interior of the device. They can cause fire and electrical shock.
		Do not use volatile liquids such as petroleum products, finger-nail polish, nail-polish remover and the like near the device. If a volatile liquid is introduced into the interior of the device, it will ignite and cause a fire.
		When you unplug the power cable, do not pull on the power cable. The cable may be damaged, and cause fire or electrical shock.
		Do not perform repairs, restructuring, or disassembly of the device by yourself. That may cause burns, fire, or electrical shock. In particular, it is dangerous to touch the manifold high-voltage parts in the interior of the power adapter.
		When wiping dust off of the device, do not use volatile cleaning liquids such as thinner or benzene; use a dry cloth. If you use an alcohol, the paint may peel.
 Caution		When you want to remove the casing covering the device, first remove all cables connected to the device. If you leave cables connected, because some circuitry inside the device will still hold current, unintentional contact made with any of that circuitry while working on the device will cause damage or injury due to electrical shock.
		Do no pull, bend, or put AC power cables near hot objects. These actions action can damage the power cables, and damaged power cables can cause electrocution and/or fire.








Plat'Home

Installing or Relocating the device

Failure to follow these precautions may result in injury, fire, or electrical shock.

 Warning		Do not stand the unit upright. Do not place the device in an unstable location, such as on a wobbly stand, or on an un-level surface. It may fall or topple over and cause injury.
		Do not install the device in places with a lot of dust or moisture, or places subjected to exposure by steam or smoke. Such an emplacement may cause fire or electrical shock.
		Do not place heavy objects on any of the cables, or place a heater or the like near the power cable. A damaged cable covering may cause fire or electrical shock.
		Do not plug power cable in to loose outlet. Loose connections may initiate a fire.
		Do not use AC power cables or AC adapters that are not designated for the device.
 Caution		Do not put any objects or covers on the device. Doing so will obstruct heat dissipation, causing fire or malfunction.
		If the device is not going to be operated for an extended period, disconnect all cables from the device and store the device in a dry area.
		Plug the device to 100V 50/60Hz AC power only.

Other Precautions

 Warning		If an abnormality such as smoke coming out of the device, or a strange smell occurs, immediately disconnect all cables from the equipment.
		If any malfunction occurs, immediately unplug all cables from the device.
		To use the device beyond its normal life span is not advisable. Continued use with the old parts may cause smoke, fire, electrical shock, and device malfunction.
 Caution		To use an inadequate battery may cause explosion. Do not remove and/or change the battery in the device.
		Do not charge, disassemble and throw into the fire the battery when finish using the device and discard the battery. Discard the battery in accordance with the local rule.